

LITERATURE NUMBER MPD 91608


SPARK PROBE REPLACEMENT

Effective 11/19/07

1120 North Main Street • Elkhart, IN 46514 PHONE: 574-264-2131 FAX: 574-206-9713

INTERNET: http://www.atwoodmobile.com

Use on Spark Ignition Models Only

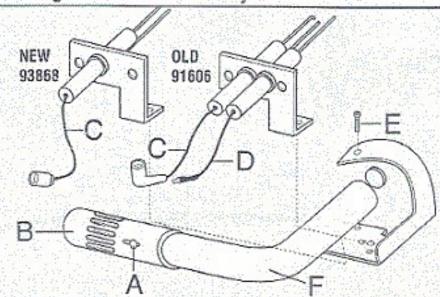

For complete water heater instructions consult water heater instruction manual.

△ WARNING FIRE AND/OR EXPLOSION

- Use with LP gas only.
- Installation in Recreation Vehicles only. RV's are recreation vehicles designed as temporary living quarters for recreation, camping, or travel use having their own power or towed by another vehicle.

△ CAUTION ELECTRICAL DAMAGE

- Label all wires before disconnecting when servicing.
- · Verify proper operation after servicing.

REMOVAL PROCEDURE

- Turn water heater switch to OFF position.
- Disconnect red wire from left hand EGO terminal.
- Remove air shutter screw-A and slide air shutter-B to the far right.
- Disconnect high voltage lead-C from circuit board and sensor lead-D if applicable.
- Remove screw-E that holds main burner-F to flue tube
- Main burner-F and spark probe assembly can now be removed from water heater.
- Turn main burner-F upside down and remove screw and nut. Then remove spark probe assembly from burner.

continued backside