

Atwood Mobile Products LLC

1120 North Main Street • Elkhart, IN 46514 PHONE: 574•264•2131 FAX: 574•262•2550


INTERNET: http://www.askforatwood.com

LITERATURE NUMBER MPD 91326

ADJUSTABLE THERMOSTAT CONTROL REPLACEMENT

Spark Ignition Models

Effective 11/19/07

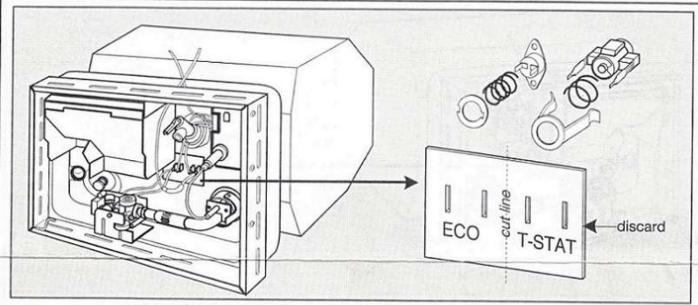

For complete water heater instructions consult MPD 93756 Models 4-E & 10-E consult MPD 93755.

REMOVAL PROCEDURES:

Front Mount Thermostat

Turn switch to OFF position.

⚠ CAUTION ELECTRICAL DAMAGE

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.
- Disconnect the two (2) brown wires from thermostat terminals on front of water heater.
- Cut the black foam pad from top to bottom between the ECO (red wires) and the thermostat (brown wires). Peel the section covering the thermostat (brown wires) off and discard.

- Remove clear, plastic washer and spring; discard.
- Remove thermostat from behind metal tabs on water heater. Discard.

INSTALLATION PROCEDURES:

Front Mount Thermostat

- Using a flat bladed screwdriver, push the 3 tabs that held the spring in place against the water heater tank.
- Assemble the adjustable thermostat spring and bracket.
- Place new thermostat retaining bracket leg tabs into opening.

Note: Both retaining leg tabs must be firmly locked behind the combustion pan. continued backside



Atwood Mobile Products LLC

1120 North Main Street • Elkhart, IN 46514 **PHONE**: 574•264•2131 **FAX**: 574•262•2550


INTERNET: http://www.askforatwood.com

LITERATURE NUMBER MPD 91326

ADJUSTABLE THERMOSTAT CONTROL REPLACEMENT

Spark Ignition Models

Effective 11/19/07

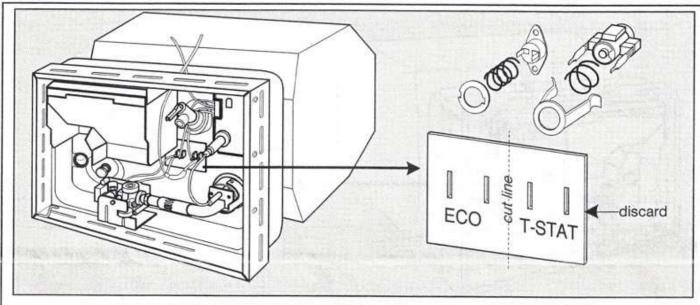

For complete water heater instructions consult MPD 93756 Models 4-E & 10-E consult MPD 93755.

INSTALLATION PROCEDURES: (continued) Front Mount Thermostat

Note: The adjustable thermostat must fully contact the water heater tank to operate properly.

 Reconnect the two (2) brown wires to thermostat terminals.

⚠ WARNING SCALDING INJURY

 Setting the temperature control dial at a higher position will produce hotter water.

- The thermostat is factory set at "C". All letter increments are 10°F.
- Peel backing off of danger label and stick label to inside of door.
- Turn switch to ON position and check for ignition.

⚠ CAUTION PRODUCT FAILURE

 Do not operate water heater without water in tank.