



LITERATURE NUMBER **MPD 53405**

A Division of Dura Automotive Systems


1120 North Main Street • Elkhart, IN 46514

PHONE: 574-264-2131 FAX: 574-262-2550

INTERNET: <http://www.atwoodmobile.com>

REGULATOR REPLACEMENT

Effective 10/21/04

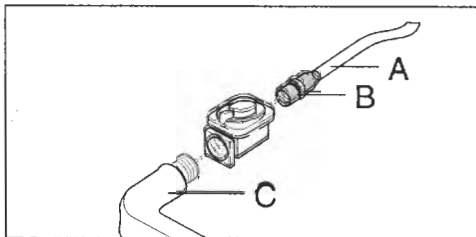

For complete Wedgewood range & cooktop instructions consult MPD 56280.

⚠ WARNING EXPLOSION OR FIRE

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56280 for complete instructions.
- For assistance or additional information consult Atwood Consumer Service Department, a qualified installer, service agency or gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.

⚠ CAUTION PRODUCT DAMAGE

- Two wrenches must be used for removal and installation of regulator. One wrench on collar of regulator and one wrench on gas line fitting or manifold.

REMOVAL PROCEDURE-

1. Shut off gas supply to appliance at appliance shut off valve or valve on gas bottle.
2. Remove gas supply line-A and pipe to tube fitting-B from inlet side of regulator.
3. Remove regulator from manifold-C

continued on backside



A Division of Dura Automotive Systems

1120 North Main Street • Elkhart, IN 46514


PHONE: 574-264-2131 FAX: 574-262-2550

INTERNET: <http://www.atwoodmobile.com>

LITERATURE NUMBER **MPD 53405**

REGULATOR REPLACEMENT

Effective 10/21/04

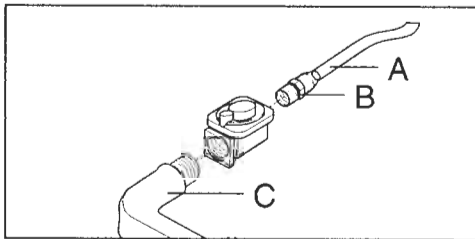

For complete Wedgewood range & cooktop instructions consult MPD 56280.

INSTALLATION PROCEDURE-

Note: Before installing new regulator apply a small amount of pipe sealant suitable for use in a LP gas system to pipe threads of fitting on manifold and pipe threads of fitting that will be reinstalled to inlet of regulator.

Note: Be sure to install regulator with arrow on body of regulator in the direction of gas flow (pointing towards manifold).

1. Install new regulator following instructions in reverse order.
2. After installation is complete turn on gas supply.



WARNING **EXPLOSION OR FIRE**

- Do not use matches, candles or other sources of ignition to test fittings and gas lines for leaks.

3. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak test in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.