


3308862.006 CONNECTION WIRING DIAGRAM

FIG. 19

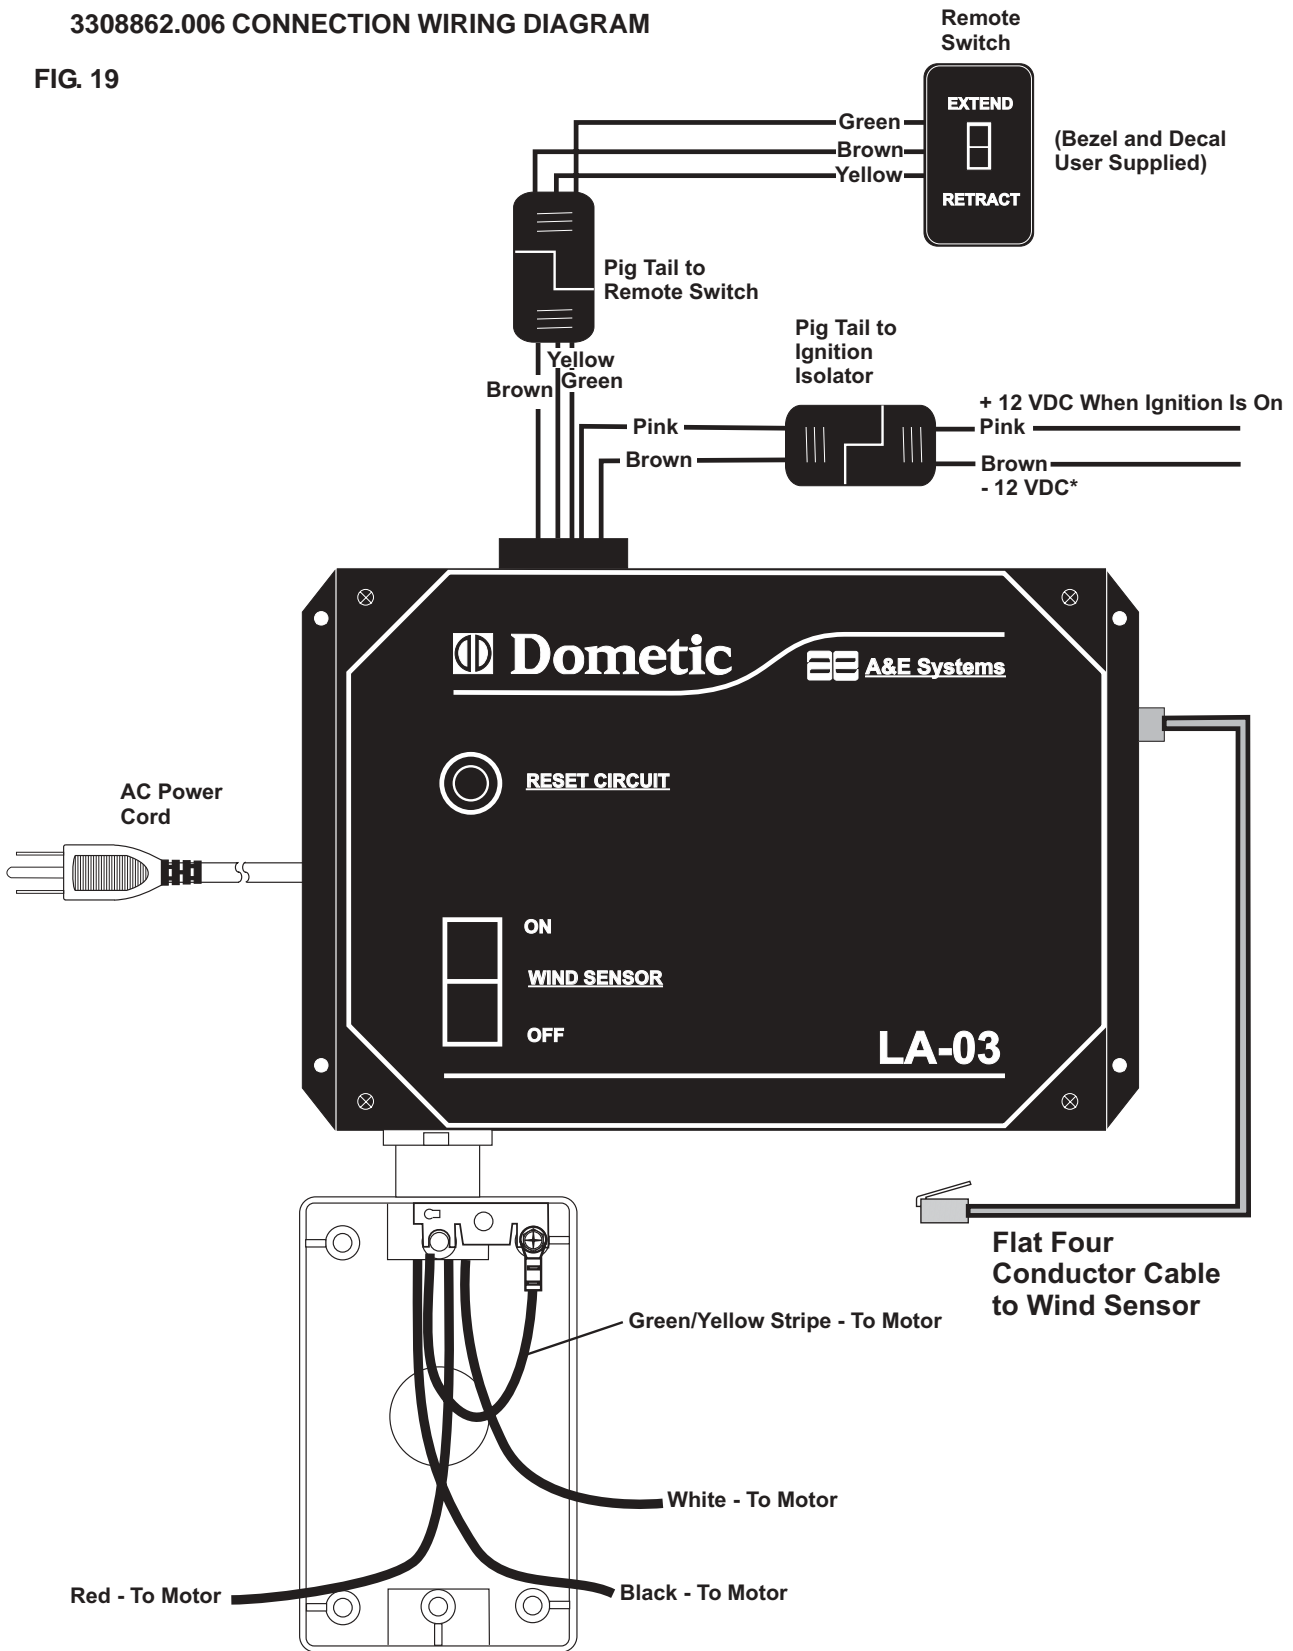

*The negative (-) battery post must be connected to chassis, if the chassis is used for a DC ground.