



1217 E. 7<sup>th</sup> Street  
 Mishawaka, IN 46544  
 Phone: 1-800-334-4712  
 1-888-339-2539  
 Fax: 574-256-6743

## **T.I.P. Troubleshooting Information on Power Gear**

### **FLAT FLOOR ROOM HEIGHT ADJUSTMENT**

This TIP sheet is designed to provide information on setting the room height on a flat floor slide-out system utilizing angled rails.

**With the room fully extended-**

- Measure from the top of the moving slide-out rail to the bottom of the slide-out room floor up close to the coach. This is dimension "A".
- Measure from the top of the moving slide-out rail to the bottom of the slide-out room floor out near the mounting bracket. This is dimension "B".
- To calculate dimension "B" use the following formula:  
 "B" (end bracket height setting) = "A" + (slideout room floor thickness) +  $\frac{1}{4}$ ".

#### **EXAMPLE:**

"B" (end bracket height setting) = "A" + (slideout room floor thickness) +  $\frac{1}{4}$ ".

If "A" = 3-1/4"

Then "B" = 3-1/4" + 1" +  $\frac{1}{4}$ " = 4-1/2"

- Perform this check on each slide-out rail independent of the other.

#### **NOTE:**

- 1) These figures are approximates. Each coach may be slightly different.
- 2) Refer to manufacturer of coach/trailer for correct slideout room floor thickness.

