HI-POWER 2,500 Acme Jack

Owner's Instructions (P/N 27448, 27450)

H&H Engineering "Hi-POWER" Acme Jack is designed to lift up to 2,500 pounds a full 18 inches. Its design also includes a built in leveling device, attached foot plate, and an emergency crank adapter.

An important part of owning and using HI-Power Jack is being sure it is properly installed and serviced.

 
GENERAL SAFETY

• Read and understand the Power Jack installation instructions. • Always block trailer wheels when using the jack. • Remove jewelry (watches, rings, etc.).

BEFORE INSTALLATION


Raise your travel trailer's front end and place blocks or stabilizing jacks under the front "A" frame.

Lower the trailer until it rests securely on stabilizing jacks or blocks. Retract present jack and remove it.




INSTALLATION

Install Power Jack in hole and secure with, 3 bolts, 3 internal tooth lock-washers (bolt holes are threaded). Attach the foot plate to HI-POWER Jack with 1/2-20 bolt and 1/2" lockwasher.

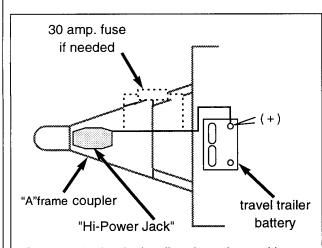

Connect the lead-wire directly to the positive (+) lead of the travel trailer's battery using a twelve (12) gauge wire. Be sure the connection is a good one. A 30 amp. fuse can be used if needed.

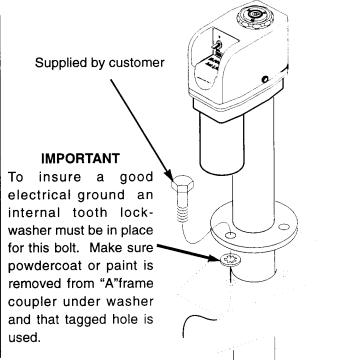

IMPORTANT NOTICE

Powerhead may be repositioned and rotated to eliminate interference with LP gas cylinder shroud.

•Just loosen set screws on powerhead collar, position head in desired location and retighten set screws.

© Copyright H&H Engineering 1989

HI-POWER2,500 P/N 27653

> REV. 10/10/01 1 of 4

H&H ENGINEERING
DIVISION OF BARKER MFG. CO. / 730 E. MICHIGAN AVE. / P.O. BOX 460 / BATTLE CREEK MI 49016 / (616) 965-2371

HI-POWER 2,500 Acme Jack Owner's Instructions

OPERATION (ELECTRIC)

-REMEMBER TO KEEP HANDS AND FEET FROM UNDER THE FOOT PLATE WHEN USING POWER JACK.

-WHEN THE HI-POWER JACK REACHES THE END OF IT'S TRAVEL(EITHER RAISING

OR LOWERING) THE INTERNAL CLUTCH ACTIVATES


-DOLLY WHEELS ARE NOT RECOMMENDED.



Avoid the risk of injury to yourself and others:

- Use the jack for lifting the travel trailer only.
- Never get beneath the travel trailer when it is supported by the jack.
- Support the vehicle with the appropriate means.

Jack will raise and lower by this toggle switch.

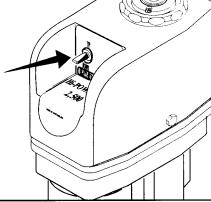


MAINTENANCE

Once a year, the powerhead should be removed and a liberal amount of grease (preferably a grease with high melting point) applied directly to the coupling on which the drive pin rests. DO NOT POUR OIL into top of jack post.

Once a year, the housing cover should be removed and the gears inspected for proper lubrication. Remove 4 screws and tap around edges of housing to free the cover--DO NOT insert screwdriver blade-this may damage mating surfaces. Before replacing cover, clean mating surfaces. If lubrication is needed, use Lubriplate GR-132 grease or equivalent.

Schematic Wiring Diagram

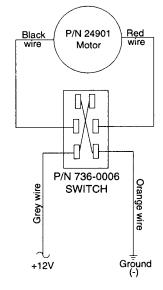




HI POWER 2,500 ACME JACK OWNER'S INSTRUCTIONS


OPERATION (MANUAL)

If an electrical failure should ever occur the emergency handle may be inserted into the jack post and the jack can be raised or lowered. (1) remove powerhead (2) insert crank adapter. (3) use 9/16 socket-wrench to adjust post.(supplied by customer)

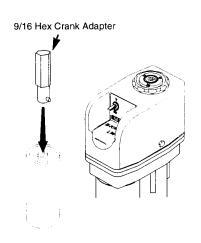

INITIAL SET-UP AND HOW TO USE YOUR HI-POWER JACK LEVEL

- 1. Install you Hi-Power Jack per previous instruction
- 2. place a small level inside your RV on a surface you want to level. This might be a counter top or freezer compartment of a refrigerator. **Note**: It will be necessary to move this level to check side to side and back to front condition.
- 3. Check the "inside level", level your trailer from side to side with stabalizing jacks or board under the wheels
- 4. Checking the "inside level", level your trailer front to back using your Hi-Power Jack
- 5. Carefully adjust the 3 small stainless steel screws on the ring that surrounds the built in bulls-eye level (see picture) until the air-bubble is inside the middle circle mark, it will then be leveled.

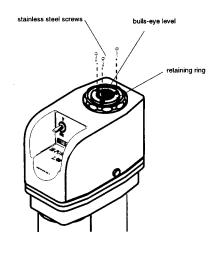

In the future, you can do all your leveling by using your Hi-Powered Jack built ing level

HI-POWER 2,500 Acme Jack Owner's Instructions

Item Part No. Req'd Description Parts: 600-0011 HEX BOLT(1/2-20 X 3-4) 1 LOCKWASHER (1/2") 2 618-1002 FOOT PLATE(BLACK) 21349 3 FOOT PLATE(SILVER) 3 12752 1 INTERNAL TOOTH LOCKWASHER 4 619-0003 5 603-5017 #10-32 X 5/8" PHILLIPS SCREW (BLACK) #10-32 X 5/8" PHILLIPS SCREW (SILVER) 5 603-5011 27276 MOTOR SLEEVE (BALCK) 6 MOTOR SLEEVE (WHITE) 6 27344 MOTOR SEAL 7 27274 HEX LOCKNUT 8 611-2100 37 9 27614 MOTOR SPACER BRACKET 10 24901 MOTOR 27335 POST ASS'Y (BLACK- 2" O.D.) 11 27537 POST ASSY (WHITE -2" O.D.) 11 **COVER LABEL** 12 27539 35 13 26351 I.D. TAG (55:1) WARNING LABEL 14 24047 15 623-1216 **GROOVE PIN** 16 636-0000 **HEX KEY** 17 608-0006 5/16-18 X 1/2" SET SCREW 18 621-0004 1/8" DIA X 3/4 DOWEL 19 25399 LOWER HOUSING (BLACK) 31 24937 LOWER HOUSING (WHITE) 19 20 80504 **SNAP BUSHING** 18 27652 **GREY WIRE ASS'Y** 21 29 22 645-0024 **BUSHING** "O" RING -TOGGLE SWITCH 23 635-0015 **CRANK ADAPTER** 24 25902 1 25 16392 CABLE TIE (BLACK) 25 17892 CABLE TIE(GREY) 26 23653 TORQUE LIMITER ASS'Y 27 10055 BUSHING 28 17422 1 **GASKET** 29 611-2100 2 HEX LOCK NUT 30 80501 **BUSHING** 11 31 80208 WASHER, SPACER 32 22012 DRIVE GEAR ASS'Y 33 17446 **UPPER HOUSING** 34 27531 **ORANGE WIRE ASS'Y** 35 605-0012 **SCREW** 36 26236 RUBBER GROMMET 606-0008 #10-16 X 3/4 TEK SCREW (BLACK) 37 €£3 4 606-0010 #10-16 X 3/4 TEK SCREW (ZINC PLATED) 37 COVER (BLACK) 38 27533 38 27540 1 COVER (WHITE) 736-0006 TOGGLE SWITCH AND NUT 39 1 606-0011 #6-32 x 5/8 TYPE "F" SCREW 40 41 27269 LEVEL RETAINER- BLACK LEVEL RETAINER- WHITE 41 27343 42 27268 CAP, MACHINED- BLACK CAP, MACHINED- WHITE 42 27341 43 27273 **CAP GASKET** 44 27272 **CIRCULAR LEVEL** 1 45 620-0000 WAVE SPRING

© Copyright H&H Engineering 1989

