



# Dinosaur Electronics

PO Box 1263, 1160 SE 27th St.

Lincoln City, OR 97367


Ph. (541) 994-4344 Fax: (541) 994-2796

## Instructions for the Re-Ignitor Module Test Adapter

### Using the Adapter with the IMT 12-P Ignitor Board Tester

1. Connect the adapter to the Re-Ignitor Module as shown in **fig. 1** below.
2. Plug the adapter into the tester cable and connect the spark wire as shown.
3. Turn **ON** the tester power switch.
4. The **IGNITOR** lamp on the tester and the **PULSE** Indicator on the Adapter should **FLASH**
5. Turn the **FLAME SENSE** switch to **LOCAL**. The **IGNITOR** lamp and **PULSE** Indicator should **STOP** flashing.
6. Turn **OFF** the **FLAME SENSE** switch. The **IGNITOR** lamp and **PULSE** Indicator should start **FLASHING** again.
7. Test complete, turn **OFF** tester power.

TOP VIEW OF RE-IGNITOR (TYPICAL)

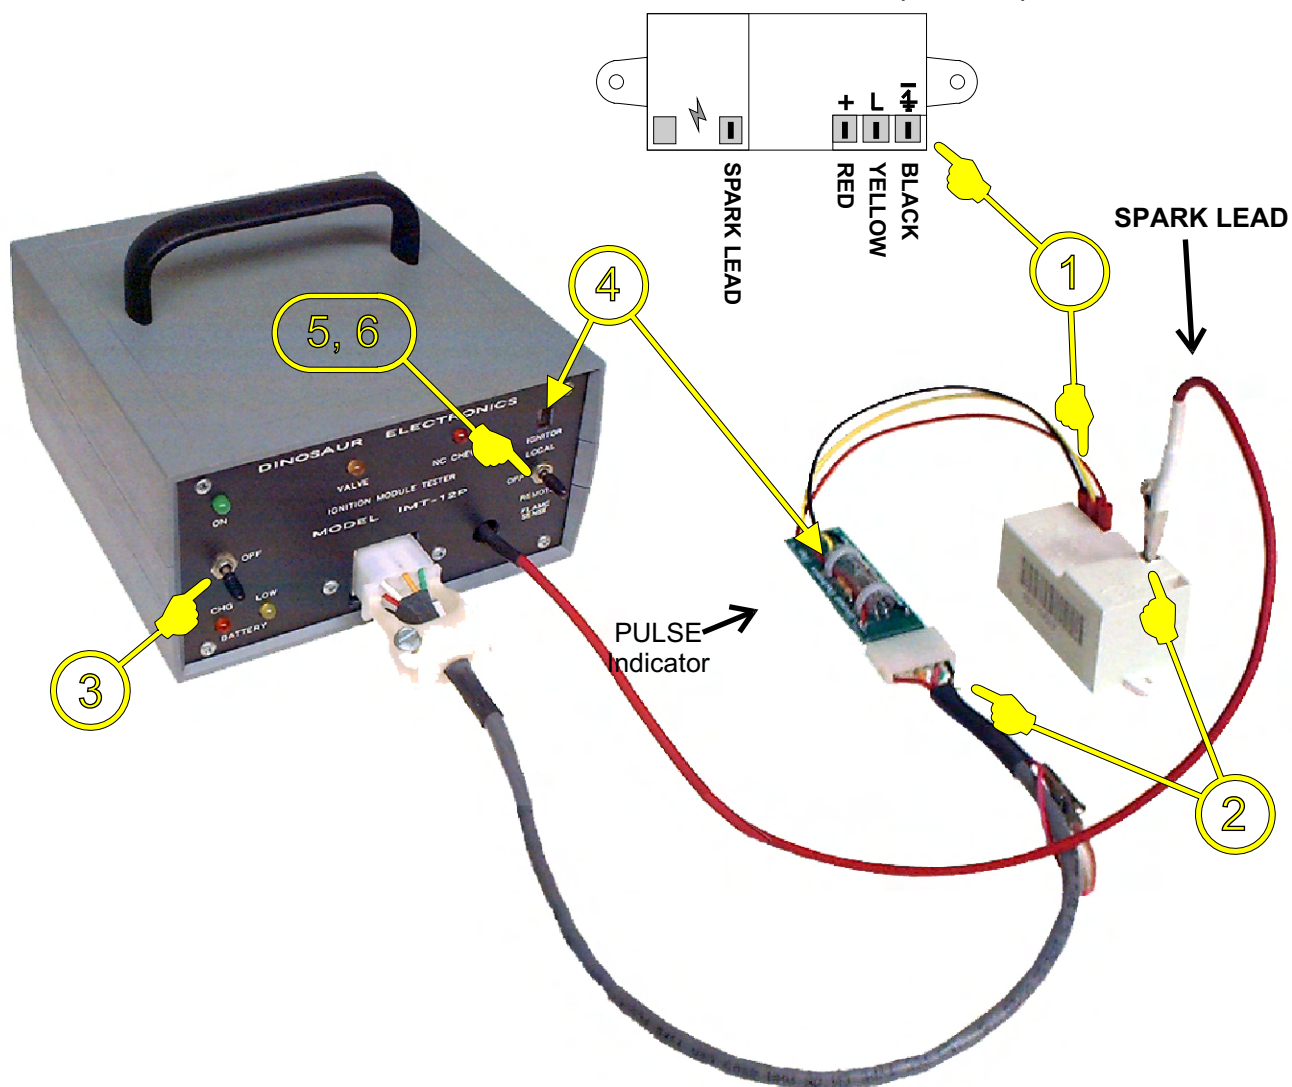

# Instructions for the Re-Ignitor Module Test Adapter

## Using the Adapter with the QuikChek Ignitor Board Tester

1. Connect the adapter to the Re-Ignitor Module as shown below.
2. Connect the Adapter to the QuikChek Tester.
3. Plug the QuikChek power adapter into a 12 Volt power outlet.
3. The **SPARK** Indicator on the QuikChek and the **PULSE** Indicator on the Adapter should **FLASH**.
4. **PUSH** the **FLAME** button. The SPARK Indicator and **PULSE** Indicator should **STOP** flashing.
5. **RELEASE** the **FLAME** button. The SPARK Indicator and **PULSE** Indicator should start **FLASHING** again.
6. Test complete, **UNPLUG** the QuikChek tester.

TOP VIEW OF RE-IGNITOR (TYPICAL)

