

DINOSAUR ELECTRONICS


(541) 994-4344

Instructions for the UIB 24VAC Rev. 3.0

This board should be installed by trained service technicians

This board comes from the factory configured as:

- Delayed, 3-try
- 17 sec. delay, 7 sec. fire, 10 sec. between fire cycles
- local and remote flame sense
- 1.5 microamp flame sensitivity

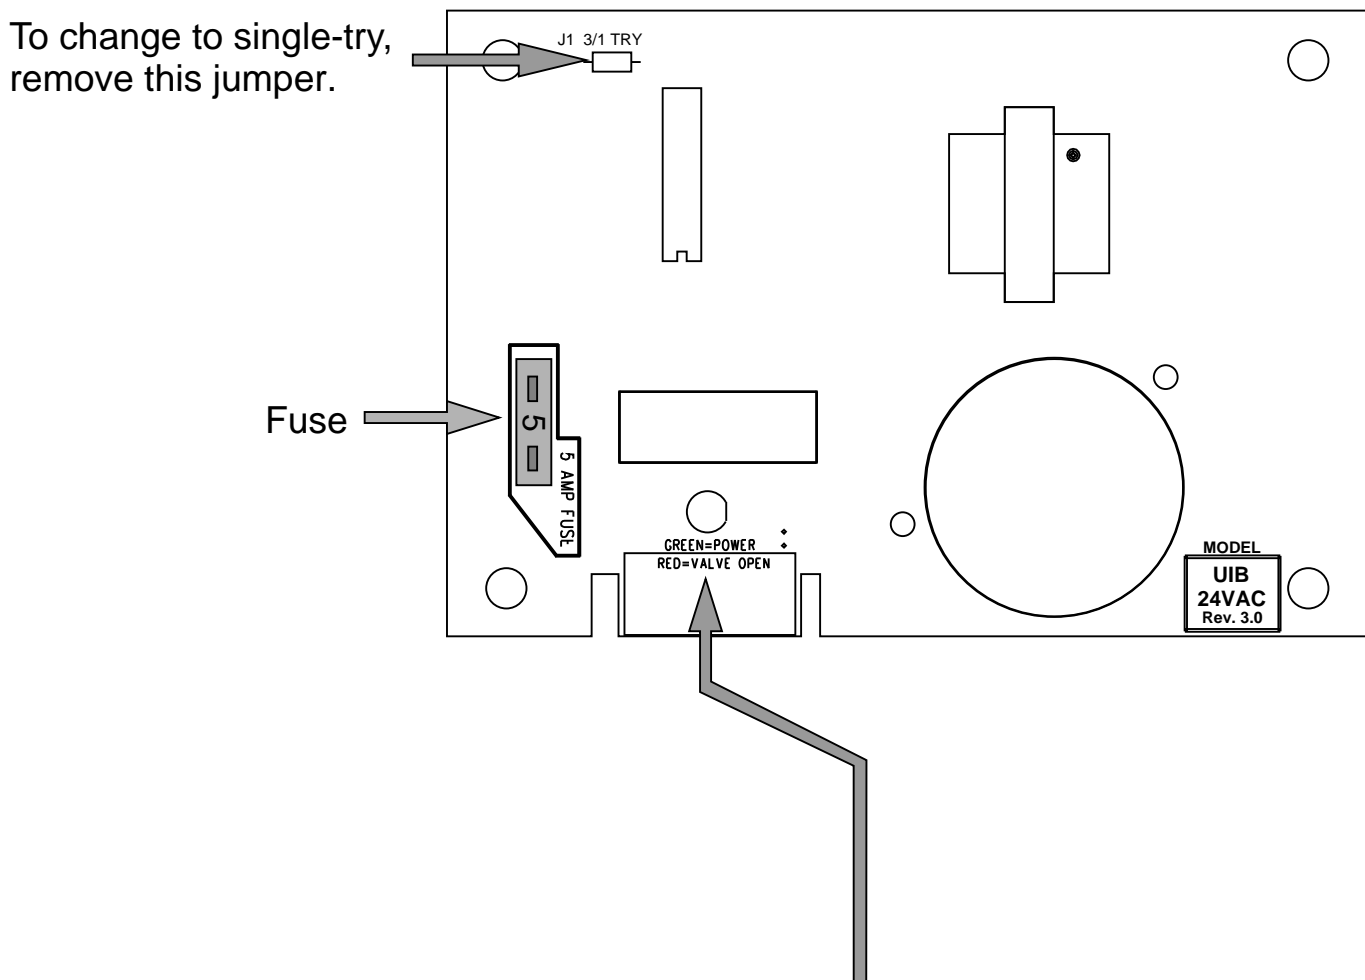

If this LED does not light up green, then check:
LIMIT SWITCH
SAIL SWITCH
5 AMP FUSE (on circuit board)