

# DINOSAUR ELECTRONICS

(541) 994-4344

## Instructions for the UIB L Rev. 7.0


**This board should be installed by trained service technicians**

This board comes from the factory configured as:

- Delayed, 3-try\*\*
- 20 sec. delay, 6 sec. fire, 20 sec. between fire cycles\*\*
- local flame sense
- 0.3 microamp flame sensitivity

\*\*When the instant fire jumper is cut, the purge time between fire cycles is changed to 1 minute.

To change to instant-fire,  
remove this jumper.

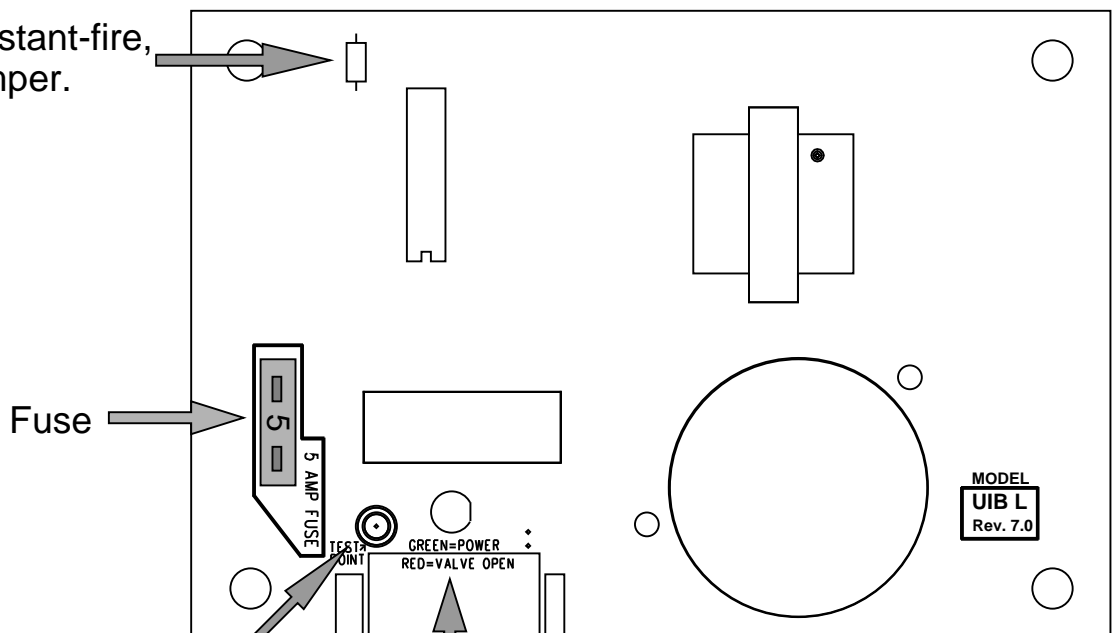

Touch the red probe of your  
multimeter to this point to check  
supply voltage to the board.  
( should be between 10 and 19 volts on DC scale )

If this LED does not light up green, then check:  
LIMIT SWITCH  
SAIL SWITCH  
5 AMP FUSE (on circuit board)