

# DINOSAUR ELECTRONICS

(541) 994-4344

## Instructions for the UIB S Rev. 10

**This board should be installed by trained service technicians**

This board comes from the factory configured as:

- Delayed, 3-try\*\*
- 20 sec. delay, 6 sec. fire, 20 sec. between fire cycles\*\*
- local flame sense
- 0.3 microamp flame sensitivity

\*\*When the instant fire jumper is cut, the purge time between fire cycles is changed to 1 minute.

