



## Top and Bottom Trim Assembly 1200 Models

- 1. Push the refrigerator completely into the enclosure.
- 2. Put the upper trim piece [1] onto the front of the refrigerator (See Art01649).
- 3. Put the four screws [2] through the mounting flange on the front of the refrigerator and into the enclosure wall.
- 4. Put a cap plug [3] on each of the screw holes in the upper trim piece on the front of the refrigerator.

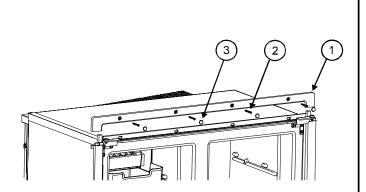

Art01649

- 5. Push the bottom trim piece [4] onto the front of the refrigerator (See Art01650).
- 6. Put the four screws [2] through the mounting flange on the front of the refrigerator and into the enclosure wall.
- 7. Put a cap plug [3] on each of the screw holes in the lower trim piece on the front of the refrigerator.
- 8. Put two or more screws through the mounting flange on the rear of the refrigerator and into the floor.

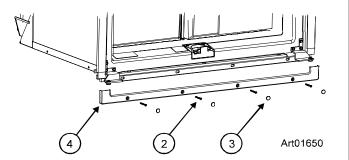

1200 trim sheet