



INSTALLATION INSTRUCTIONS

FOR BUILT-IN MOUNTING KIT

3109563.130B

FOR USE WITH
MODEL DMW13B

Kit No.	Item	Qty.	Use With
3109563.130B (Black)	Trim Frame	(10)	DMW13B

A. ELECTRICAL REQUIREMENTS

- * Observe all governing codes and ordinances.
- * A 120 volt, 60 Hz. AC only, 15 or 20 amp fused electrical supply is required (time delay fuse is recommended)
- * It is recommended that a separate circuit serving only this appliance be provided.

WARNING

The appliance must be disconnected from the source of supply before attempting the installation of this Kit. The Kit is intended for use only with above designated model.

B. GROUNDING INSTRUCTIONS


WARNING

Improper use of this grounding plug can result in a risk of electrical shock. DO NOT, under ANY circumstances, remove the power supply cord grounding prong.


For your personal safety, this appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current. This appliance is equipped with a polarized 3-prong grounding plug.

It must be plugged into a correct polarized mating 3-prong grounding type wall receptacle, properly installed and grounded in accordance with the National Electrical Code and Local Codes and Ordinances. Refer to Figure 1.

Figure 1

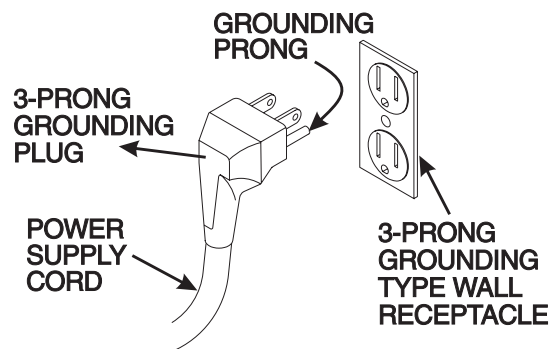

If mating wall receptacle is not available or if you are not sure if the wall receptacle is properly grounded and polarized, have it checked by a qualified electrician. It is the responsibility and obligation of the customer to have a properly grounded and correctly polarized 3-prong wall receptacle installed by a qualified electrician. See Figure 1. Consult a qualified electrician if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. See Figure 2 for location of electrical outlet inside the opening at the rear.

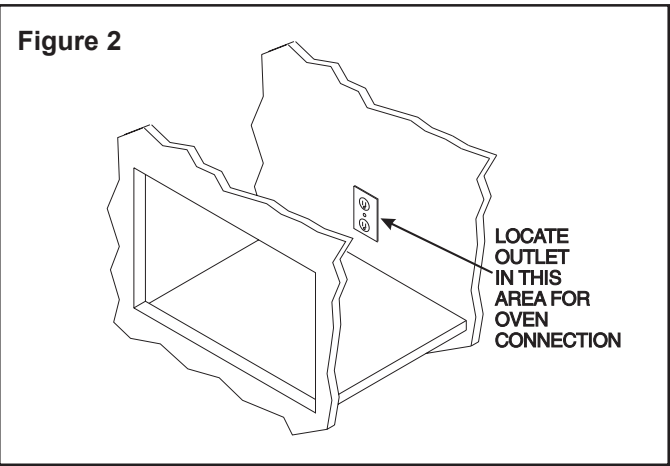


C. INSTALLATION PROCEDURE

CABINET OPENING

MODEL	DIMENSIONS
DMW13B	22.13" wide x 14.53" high

1. See Figure 3. All corners should be square. The floor of the microwave must be level and capable of supporting 100 pounds.

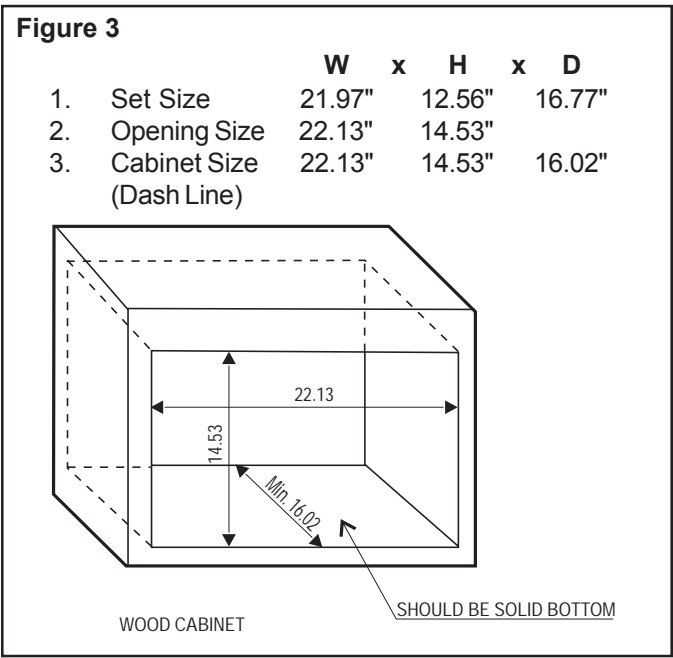

2. Mount the trim frame on the outer case using three 12mm screws supplied with microwave (two #8 screws not supplied, can be added if desired). Then mount the duct on the outer case using two 8mm screws (not supplied). (See Figure 4)
3. Put the microwave oven into the cabinet.
4. Screw the upper and lower trim onto the cabinet using four screws (not supplied). (See Figure 5)

Note: No screws supplied to install duct.

