


#SK02 STACK KIT MOUNTING INSTRUCTIONS AND PATTERN

FOR USE WITH AS66VX 110V ELECTRIC DRYER & AW122 FRONT-LOADING WASHER

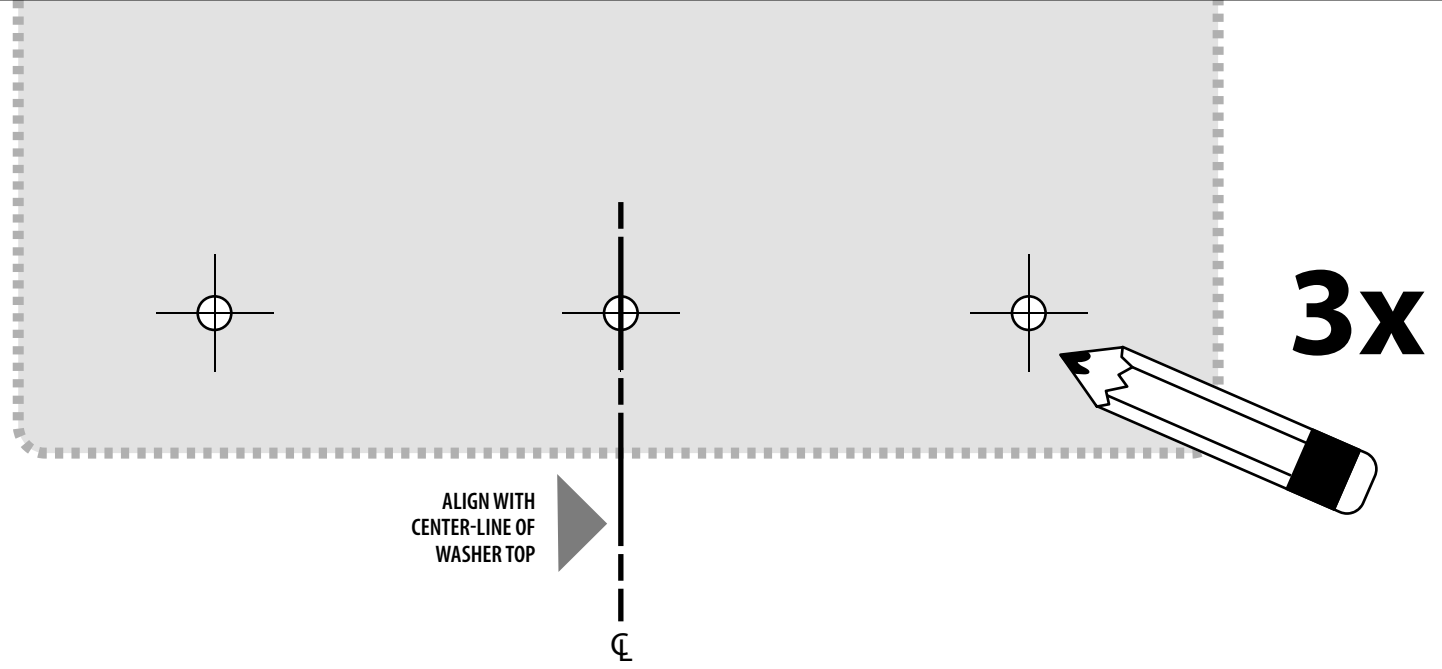

THIS KIT IS INTENDED TO PROVIDE FOR EASIER INSTALLATION AND REMOVAL OF THE WASHER AND DRYER IN CLOSE-FITTING RV AND MARINE INSTALLATIONS. THIS KIT MAY ALSO BE USED TO SECURE THE DRYER ON TOP OF A STURDY, WOODEN SHELF.

1x

C

1x

E

F

1x

E

G

7x

D

D

SIZE
3/32"


3x

F


DRILL BIT NOT INCLUDED

Self-Tapping


DRILL BIT NOT INCLUDED

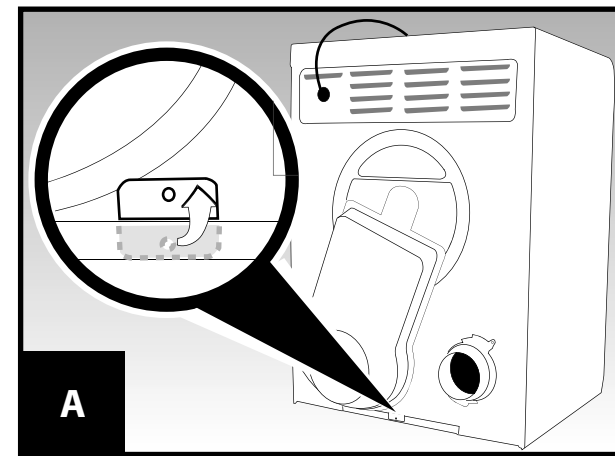


A Bend tab up so rear bracket can be inserted later

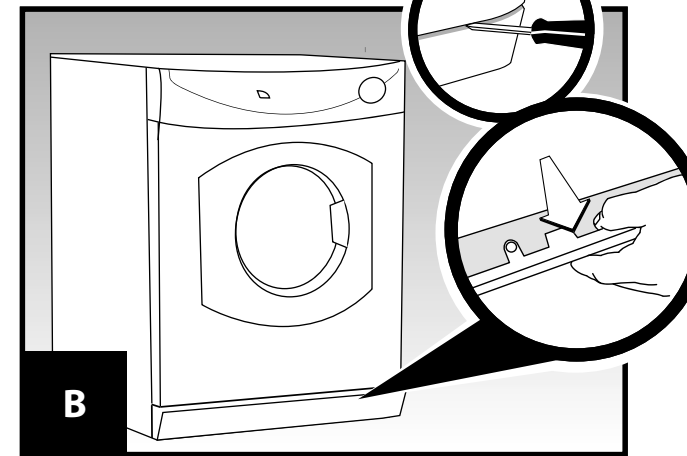


B Remove dryer kick-plate

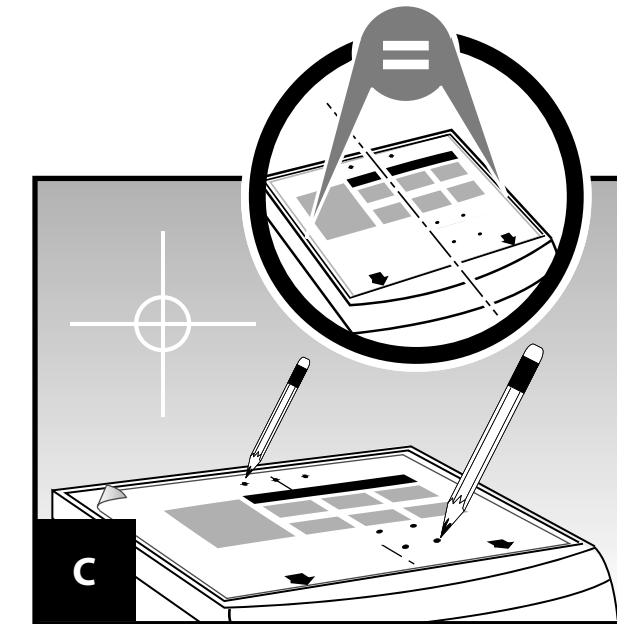


C Use pattern to mark drill hole positions on washer top

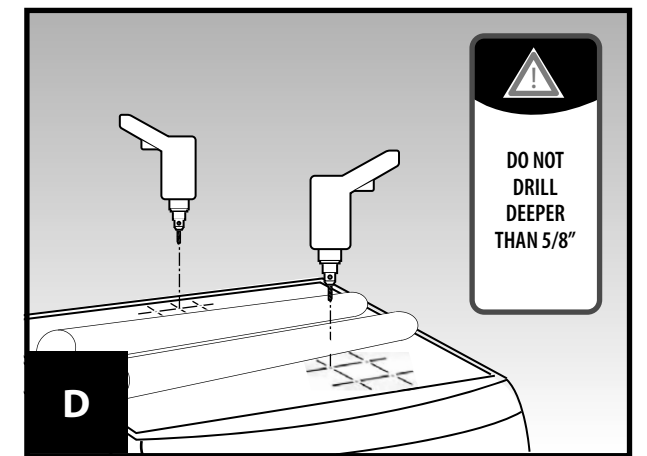


D Drill holes into washer top

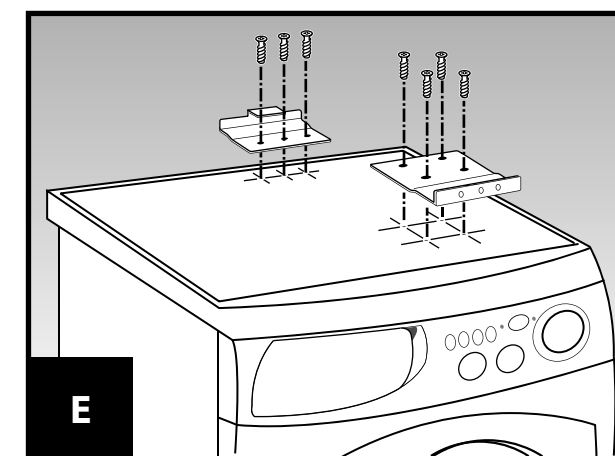


E Secure brackets to washer top

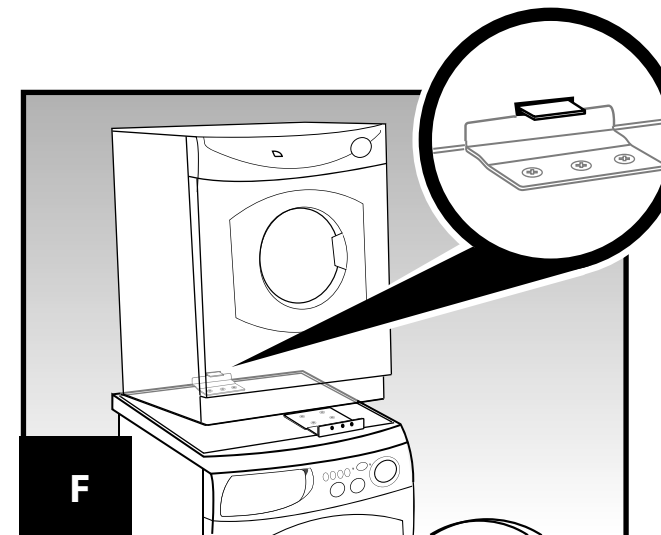



F Insert rear bracket into dryer

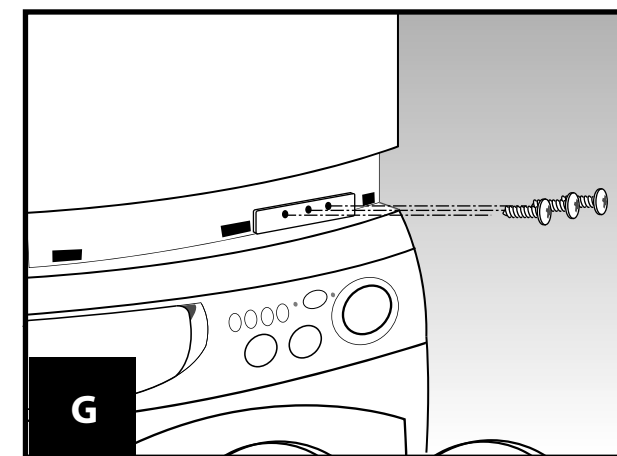




G Secure front bracket to dryer

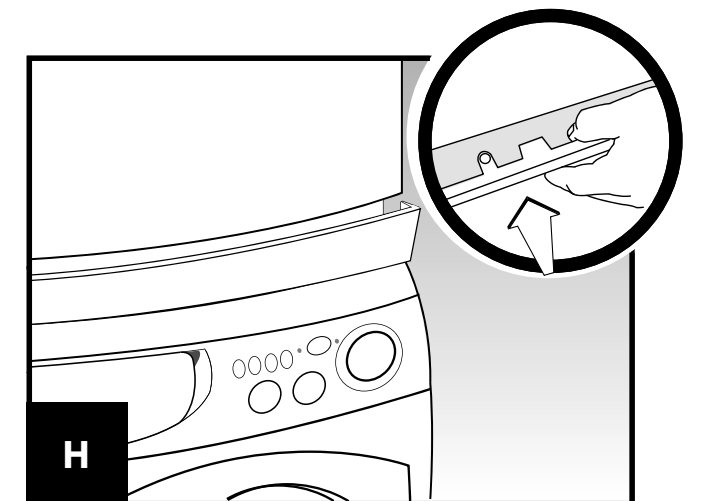

H Reinstall dryer kick-plate

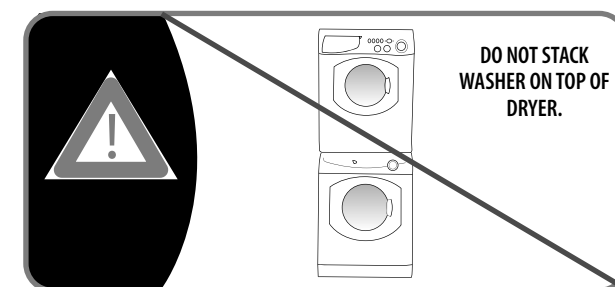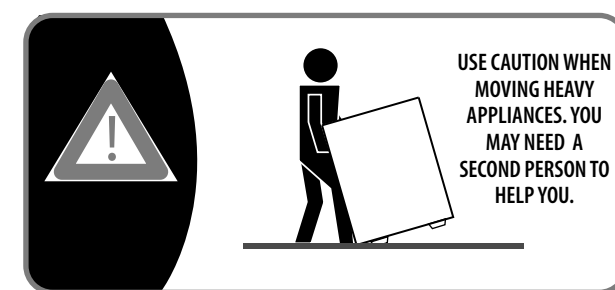

4x

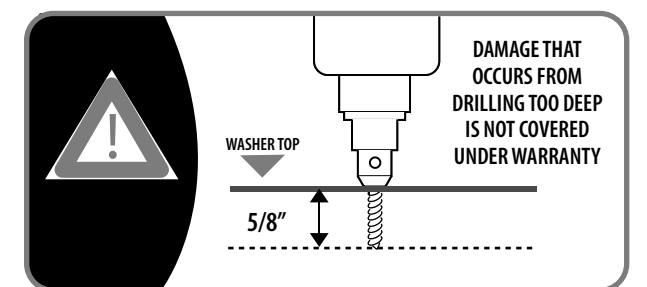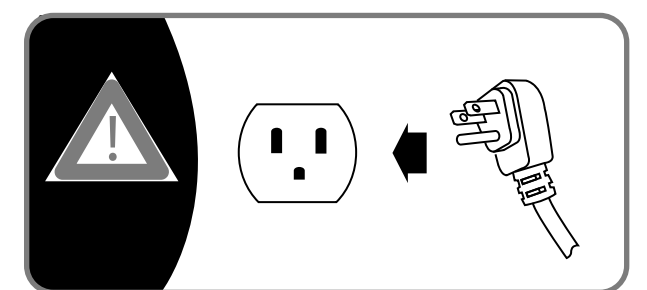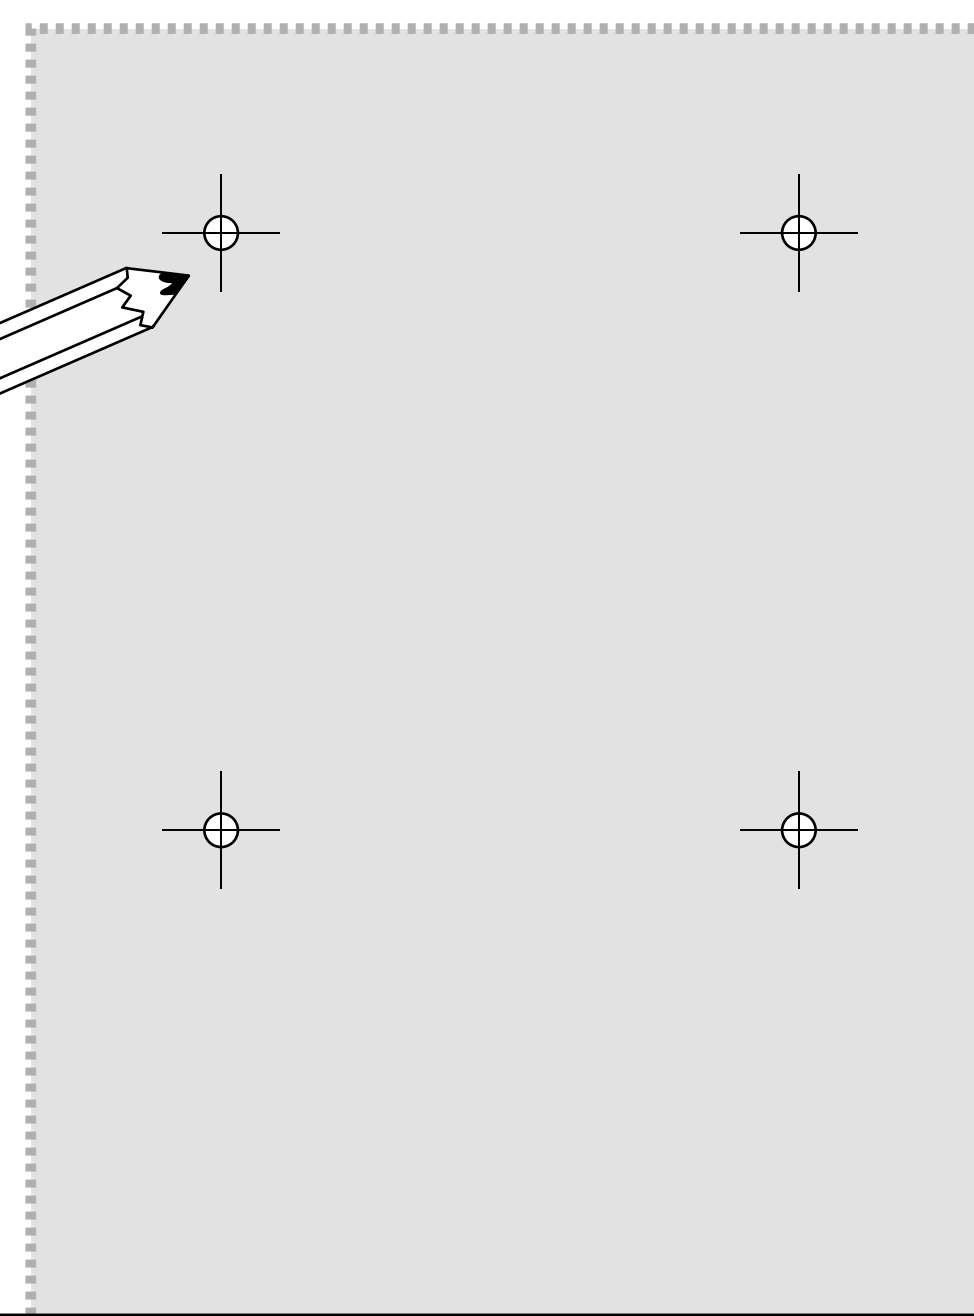

USE ONLY SCREWS FROM KIT

