


--- OPTIONAL START COMPONENTS AND WIRING.

* PURPLE AND BLACK WIRES ARE SPLICED TOGETHER WHEN NO START RELAY IS USED.

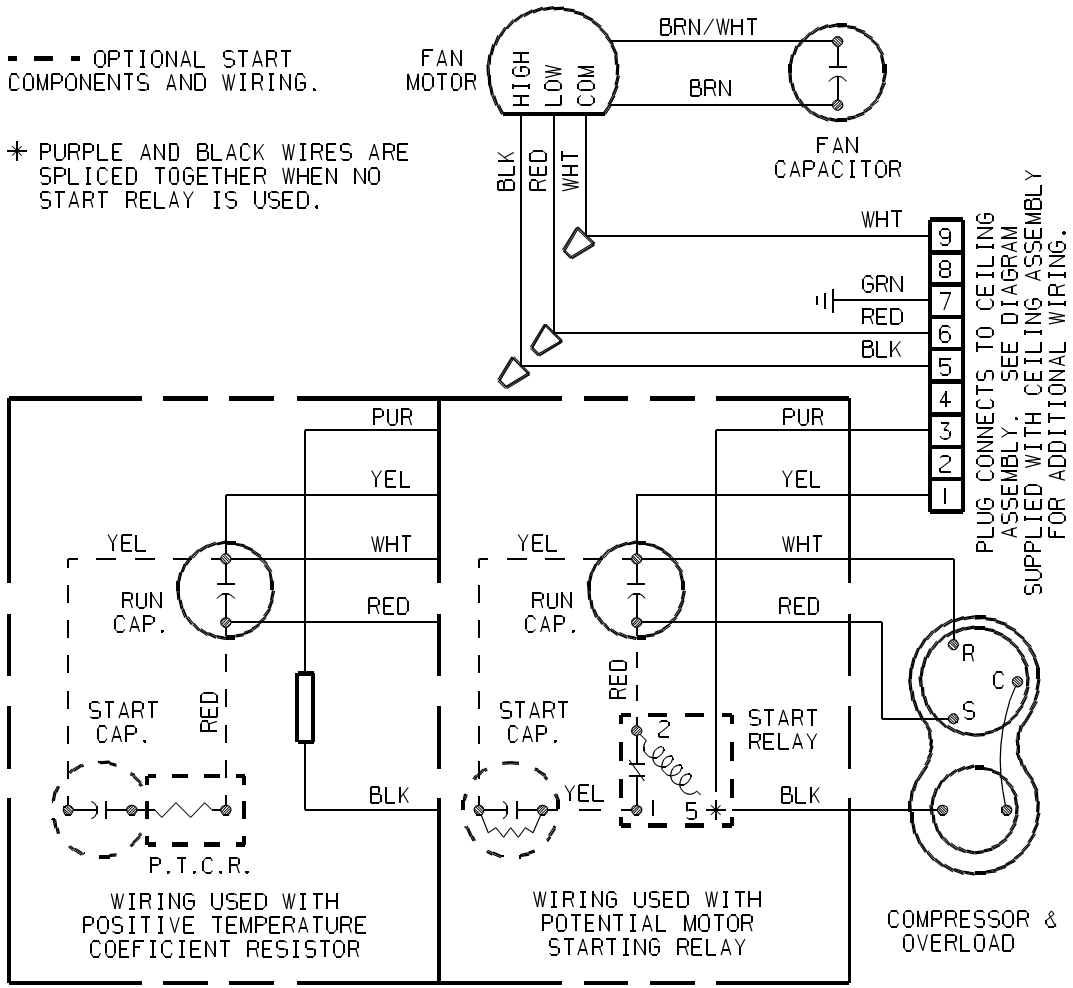

DANGER! SHOCK HAZARD! AVIS!

DISCONNECT POWER SUPPLY BEFORE SERVICING ANY ELECTRICAL COMPONENT.

DEBRANCHES LES FILS ELECTRIQUES AVANT L'ENTRETIEN ET LE DE TOUT COMPARTIMENT OU ORANGE ELECTRIQUES.