

Holding Tank Accessories

SmartTote® **Permastore™ 5' Hose** **Assembly**

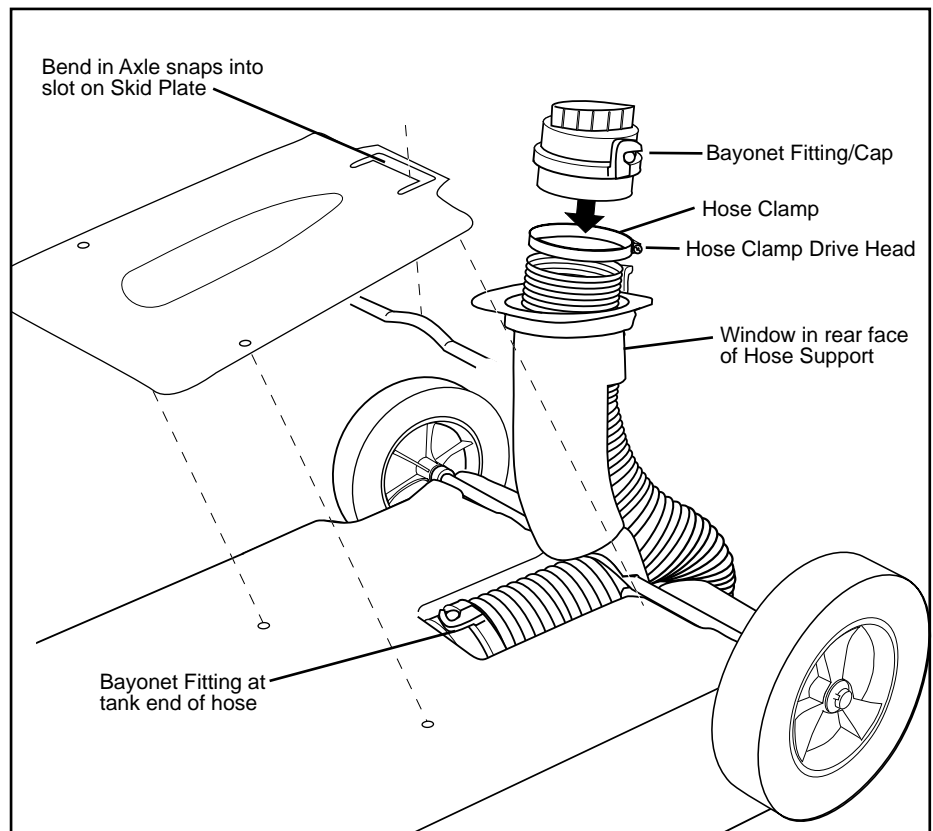
*Made in the USA***Thetford Corporation****Ann Arbor, MI 1-800-521-3032 www.thetford.com**

F# 40622 2/07

Before Beginning

- ✓ Read all instructions completely.
- ✓ Wear protective gloves, glasses, long sleeves, and nose/face mask to avoid contact with human waste.
- ✓ For hygienic reasons, rinse tank and hose thoroughly.

1. Place tank on one side.
2. Remove two screws from Skid Plate. Slide Skid Plate down and pop it off of Axle Assembly. Set Skid Plate and screws aside.
3. Release old Hose Support from tank. Set tank on its top with Axle facing up.
4. Flip up Hose Support. Keep Hose end up above tank for hygienic reasons.
5. Remove dump end Bayonet fitting/cap by unscrewing Clamp. Set Bayonet fitting/cap aside. Discard Clamp and Screw.
6. Slide Hose out of Support. Lower Support out of the way.
7. Rotate fitting at tank to disconnect Hose Assembly from tank.
8. Pull old Hose Assembly up and out of Support. Discard.
9. Feed open end of new Hose under Axle and through Support.
10. Connect Bayonet fitting to tank.
11. Insert Bayonet fitting/cap into Hose. Position Clamp so Clamp Drive Head is up and Drive Head will align with Hose Support window (Fig. A).
12. Tighten Hose Clamp Screw securely. Rest Hose Support Assembly on solid surface.
13. Position Skid Plate on Axle to remount. Lock axle bend into Skid Plate slot.
14. Fasten Skid Plate to tank with Screws.

**Fig. A Hose Support and Tank component assembly**