Atwood Truck Camper Jacks

	Truck Cam _l	J	Color			
	Truck Camper Jack Selection Guide Model Part No. Pure (A) jacks only) REMOTE CONTROL JACKS (set of four (4) jacks only)					
	Model	Part No.	Pur	NEW MEW	M. 8, 01.	cange Cange
Ì	REMOTE CONTROL	JACKS (se			ıly)	
Ì	Electric Ball Screw	80491	•		•	•
Ì	Electric Ball Screw	80492		•	•	•
١	Heavy Duty Ball Screw	80411		•	•	•
	Heavy Duty Ball Screw	80417	•		•	•
	REMOTE CONTROL I					
	Wireless	85441				
	JACKS (set of four	(4) jacks	only)			
ال	Electric Ball Screw	80488	•		•	•
١	Electric Ball Screw	80489		•	•	•
١	Heavy Duty Ball Screw	80412	•		•	•
١	Manual Ball Screw	84371	•		•	•
١	Manual Ball Screw	84376		•	•	•
١	Acme Screw	84241		•	•	
Ì	Acme Screw	84246	•		•	
Ì	HARDWARE/BRACKET	KITS for wid	le front, narro	w rear with l	wer clamps	or rear jacks
Ì	Electric Ball Screw	85930		•	•	•
١	Electric Ball Screw	85964	•		•	•
١	Manual Ball Screw	85925		•	•	•
Ì	Manual Ball Screw	85927	•		•	•
Ì	Acme Screw	85966		•	•	
Ì	Acme Screw	85967	•		•	
Ì	HARDWARE/BRACKET		ide front, v	ride rear wi	h lower cla	mps
Ì	Electric Ball Screw	85981		•	•	•
Ì	Electric Ball Screw	85983	•		•	•
Ì	Remote Electric	85984	•		•	•
Ì	Remote Electric	85985		•	•	•
Ì	Manual Ball Screw	85979		•	•	•
Ì	Manual Ball Screw	85982	•		•	•
Ì	HARDWARE/BRACKET	_	ide front, v	ride rear <u>wi</u>	hout lower	clamps
Ì	Acme Screw	85969		•	•	
Ì	Acme Screw	85970	•		•	
Ì	HARDWARE/BRACKET		rrow front, r	arrow rear	vith lower c	amps
١	Electric Ball Screw	85972	•		•	
Ì	Manual Ball Screw	85974	i unit a		•	
Ì	SWING-OUT KITS fo		dual-wne	el pick-ups		
١	All Pickup Jacks	85428		•		
Ì	All Pickup Jacks	85473	● W Detref	t anta aut	L'am Abus	.l. laaka
Ì	RETROFIT KIT (Zinc		LY) Retroit	ts onto exis	ting Alwoo	d Jacks
Ì	Electric Ball Screw	87357				
Ì	Remote Electric	87329				
ı	REPLACEMENT PAR	112				

^{*} Includes mounting brackets as specified, required bolts, washers and nuts, handle, wiring receptacles and installation/operation instructions.

85442 85453

Handheld Wireless Remote

14' Phone Cable

Hardware/Bracket Kits (required) include mounting brackets, required bolts, washers and nuts, handle and installation/operation instructions, plus wire receptacles for the Electric Ball Screw Jack.

The Swing-Out Kit, to accommodate dual-wheel pick-ups, must be used in conjunction with a Hardware/Bracket Kit.

Retrofit Kit includes lower zinc clamp, wiring receptacles, required bolts, washers and nuts, handle and installation/operation instructions.

Wireless Remote Control Kit—85441

The Remote Control Kit consists of the micro-processor unit with antennae, activation wall switch, cable connecting the unit to the wall switch, and handheld remote control.



TO ORDER JACKS, KITS AND REPLACEMENT PARTS -


1. DETERMINE TYPE OF JACK

Application

Hand Cranked Acme Manual Ball Screw Electric Switched Remote Control

SEE SELECTION GUIDE ON LEFT

- 2. COLOR CHOICE New White or Pure White
 3. REMOTE CONTROL Order kit separately
 4. BRACKET KITS Wide Front / Wide Rear
 GVWR < 1500 lbs. (ONLY) Order Narrow Fronts / Narrow Rears
 Interference in the camper rear
 (reperator or water heater compartment) Order Wide Fronts / Narrow Rears
 - (generator or water heater compartment) .. Order Wide Fronts / Narrow Rears Truck with Dual Rear WheelsOrder Swingout Bracket Kits

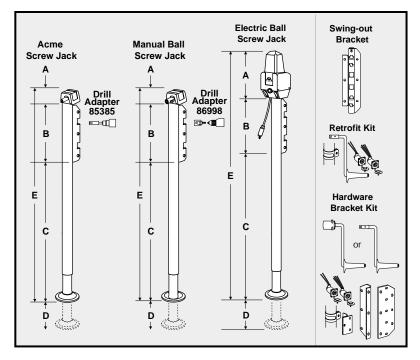

Dimensions

Model	Α		В		С		D		E	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
Electric	11	279	13	330	32	813	33.5	851	56	1422
Manual	3	76	13	330	32	813	33.5	851	48	1219
Acme	3	76	13	330	32.5	826	27.5	699	48.5	1232

Accessories

Model	Part No.	Color
High Lift Foot	87368	_