
# RV Toilet Service Parts for Aria/Aria Deluxe.

#### Notes:

- · Read all instructions before beginning work.
- Spacer(s) must be used if distance from top of Closet Flange to floor is less than 7/16". Add Spacer(s) to reach exactly 7/16" (not greater) (Fig. A).
- Spacer orientation does not matter.




#### Tools needed

- · Drill with 3/16-Inch Drill Bit
- · Flat-blade screwdriver
- 7/16-Inch Wrench
- Silicone Sealant
- 1/2-Inch Ceramic Drill Bit with Locking Ring (available at a local hardware store) if mounting on Ceramic Tile (see Special Section)

#### To Add New Spacer

#### (replacing an existing toilet with a new Aria)

- 1. Turn off RV water supply per RV Owner's Manual.
- Disconnect Water Supply Line from existing toilet per its Owner's Manual. Remove toilet from floor.
- 3. Remove old Closet Flange Seal if found in floor at Closet Flange. Discard.

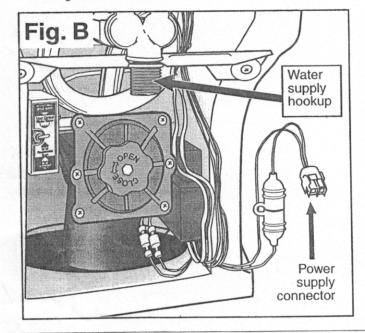

# Note: See Special Section now if installing Aria on Ceramic Tile.


 Apply a generous bead of silicone sealant (not supplied) around underside(s) of Spacer(s). Affix Spacer(s) to floor Flange.

## To Mount Aria To Floor (Refer to Fig. C)

- 1. Secure new Closet Flange Seal, lip side down, to Aria.
- 2 Position Aria over floor Flange/Spacer(s). Pilot drill

holes with 3/16" bit. Screw Closet Lag Screws into wood sub-flooring until Toilet is totally secure.

- 3. Connect Water Supply Line (Fig. B).
- Connect 12-volt power supply.
- 5. Secure Bolt Caps.
- Turn on RV's water supply. Press toilet flush button to close blade and to flush test.

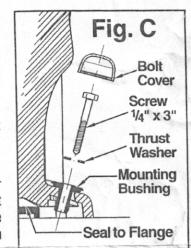

#### Special Section:

## Spacer(s) Installation on Tile

- Position new Aria over center of Closet Flange. Confirm that Aria is lined up/centered properly by looking through Blade opening.
- Mark Lag Screws drill locations on floor. Remove Aria.
- Measure Tile thickness. Set locking ring on Drill Bit to that dimension to assure that you drill only through Tile and <u>not wood sub-flooring</u>.
- 4. Drill holes on both sides.
- Completely clean (and dry) flooring installation area.
- 6. Pick up with No. 4 under **To Add New Spacer** Section.

