



A Division of Dura Automotive Systems

1120 North Main Street • Elkhart, IN 46514


PHONE: 574-264-2131 FAX: 574-262-2550

INTERNET: <http://www.atwoodmobile.com>

LITERATURE NUMBER **MPD 53409**

PUSH BUTTON PIEZO IGNITOR REPLACEMENT

Effective 10/21/04

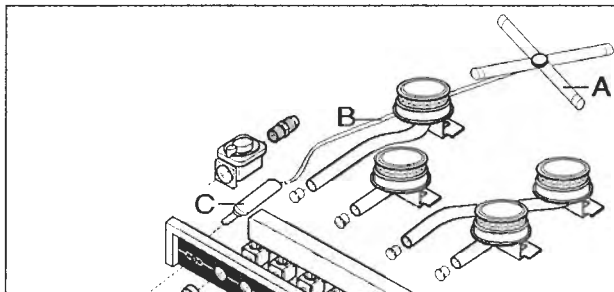

For complete Wedgewood range & cooktop instructions consult MPD 56206.

⚠ WARNING EXPLOSION OR FIRE

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to MPD 56206 for complete instructions.
- For assistance or additional information consult Atwood Consumer Service Department, a qualified installer, service agency or the gas supplier.
- Follow directions exactly for proper installation, adjustment, service and maintenance.

2. Remove top and two screws securing the ignitor/flash tube assembly-A from the burner box and remove the electrode wire-B. Remove the ignitor/flash tube assembly.
3. Remove the nut holding the ignitor button assembly-C to the control panel. Remove the ignitor button assembly-C.

INSTALLATION PROCEDURE-

1. Install new assembly by following the above instructions in the reverse order.
2. Turn on the gas supply to the appliance.
3. Check all connections for gas leaks using a non-corrosive leak detection fluid. Do not use a soap and water solution. Leak testing in excess of 8 oz. per square inch (1/2 psi) of air pressure will invalidate warranty.

REMOVAL PROCEDURE-

1. Turn off the gas supply using the appliance shut off valve or valve on the gas bottles.