
TO CLOSE AWNING:

1 Return Awning to Travel Position

CAUTION


When awning is closed, bottom arm assembly will fold down and against back channel. To avoid personal injury and/or property damage, keep space beneath bottom arm assembly clear of objects and people.



Remove tie downs and sun screen if installed. Press and hold the "RETRACT" button on the control box or the remote switch.

When awning is fully closed, release button.

Important: Do not press the control box and the remote switch "Retract" buttons at the same time. Awning will not work and/ or may cause control box fuse to blow.



Important: As an extra safety precaution, visually verify that the

awning is fully closed.

A. If "RETRACT" button is released before the awning is fully closed, it will remain in the position when released. The aw-

- closed, it will remain in the position when released. The awning will continue to close when pressed again.

 IN CASE OF COACH POWER FAILURE:

 1. Remove sun screen and tie down straps if in use.

 2. The One Step control box provides an auxiliary power connection in case of power failure in the coach. An external 12 VDC power source such as an automobile battery is required.
- 3. Locate the auxiliary power connection by the red and black wire
- with a two way plug and jack connector with a cap on it.
 Remove the cap and connect the supplied 10 ft. harness by plug ging in the connectors.

Attach the 10 ft. harness to the 12VDC source and the One Step awning can be closed using the switch on the control box or the



TO MANUALLY CLOSE AWNING:

Note: This procedure will require two people. When this procedure has been performed the awning must be service by an authorized service center before using again.

- Remove sun screen and tie down straps if in use.

 Remove sun screen and tie down straps if in use.


 Slide the pull strap (provided) into the utility slot of the FRTA.

 While one person is holding onto the pull strap, remove the three
 screws in the FRTA right hand end cap. The FRTA will roll in once
 the screws are removed. Walk the awning to the closed position.


 Drive as many screws as possible back into the FRTA end cap to

CAUTION

Screws must be re-installed to prevent awning from opening during travel. Have awning serviced by an authorized service center before attempting to open awning when this procedure has been




Form No. 3109394.019 8/00 (French 3109554.018) ©2000 The Dometic Corporation LaGrange, IN 46761

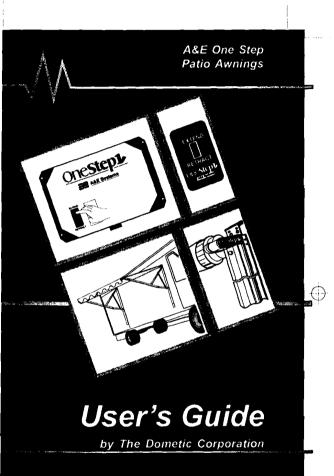

TO OPEN AWNING:

1 Extend

Press and hold the "EXTEND" button on the control box or the remote switch. When awning is fully open, release button. Important: Do not press the control box and the remote switch "EXTEND" buttons at the same time. Awning will not work and/or may cause control box fuse to blow.

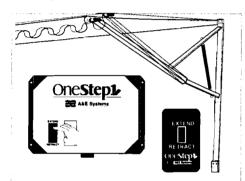

Note: The control box system is protected with a 10 amp fuse. If needed, a spare 10 amp fuse is taped inside the control box. Shut off the 12VDC power to control box and remove control box cover to expose fuse on inside. Replace if necessary.

 If awning should hit an object while opening or button is not released at full open, the control box will cut power to the motor.

motor.
Important: When the power has been interrupted, wait approximately 15 seconds before depressing button again.

The control box will automatically restore power when

button is pressed again.

B. If "EXTEND" button is released before the awning is fully


B. If "EXTEND" button is released before the awning is fully open, it will remain in the position when released. The awning will continue to open when pressed again. Important: When installed on a motorized RV, this system is

Important: When installed on a motorized RV, this system is wired to prevent accidental awning extention when vehicle ignition key is in the on position. When ignition key is turned on, the power going to the awning will be interruped and it will not operate in the "Extend" mode. This however, will not prevent awning from being retracted.

Tie Down Straps

Your A & E Awning comes with two (2) tie down straps, Iwo (2) springs and two (2) stakes. A & E tie down straps secure your awning through the utility slot in the roller tube. This method eliminates the risk of damaging the torsion rods. We recomend you use this method instead of former methods you may have used on your previous awning.


After awning is extended, slide straps in open grove in awning roller tube on left end. Position one at each end. Screw stakes into ground at desired position. Place strap through spring and attach spring to stake. Draw both straps tight by pulling on loose end of strap at buckle.

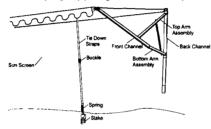

Optional Sunscreen

Your A & E awning also comes with a sunscreen. You will find it very helpful when awning side of RV is facing west in the late afternoon. It will provide great enjoyment when the sun is setting.

Slide sunscreen into groove of the roller tube from left side. Place in desired position.

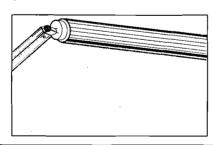


ACAUTION

THE A&E ONE STEP AWNING IS EXTREMELY DURABLE AND CAN BE OPERATED DURING MODERATE RAIN AND WIND CONDITIONS. HOWEVER, WHEN PERIODS OF HEAVY RAIN AND/OR WIND IS EXPECTED THE AWNING SHOULD BE CLOSED AND IN THE LOCKED POSITION. DAMAGE CAUSED BY WIND AND RAIN IS NOT COVERED BY WARRANTY.

Rear Arm

Your A & E awning is designed to shed water if left out in the rain. The rear arm will automatically decrease the awning height approximately 9 inches when it is raining. When there is no longer the need to shed water it will return to the normal height.



A&E ONE STEP HELPFUL HINTS:

- Whenever the awning is wet while rolled up, as soon as conditions allow, roll it out and let it dry before rolling it up again. This will help prevent the formation of mildew and add greatly to the life of the awning.
- Mildew does not form on the fabric itself, but on the accumulated dust, dirt and grime. Periodically clean vinyl or wover acrylic fabric using a mixture of 1/4 cup of dish soap and 1/4 cup of bleach mixed with 5 gallons of warm water. Liberally slosh the mixture on the top of the fabric and roll the awning up for 5 minutes. This will apply the mixture to the bottom as well. Roll it back out and hose off with fresh water. Repeat if necessary. Allow to dry before rolling up.
 Always make sure the awning is fully extended before opening
- Always make sure the awning is fully extended before opening the entry door.

WHEN TO GET MORE HELP:

This User's Guide is intended to provide practical instruction for the sequential operation of the A&E One Step Patio Awning. If malfunctions occur that cannot be corrected by reviewing this Guide, they should be directed to a qualified Dometic service technician.



