RV Toilet Service Parts for Aria CLASSIC

Tools Needed

- 7/16 wrench
- Adjustable wrench
- · Flat-blade screwdriver
- Pliers
- Small clippers
- Towels

Note

· Read all instructions before beginning work.

Remove Toilet

- 1. Turn off RV water supply per RV Owner's Manual.
- 2. Pry off Bolt Caps with flat-blade screwdriver. Use wrench to remove 7/16 -inch Lag Screws.
- 3. Disconnect Water Supply Line with adjustable wrench.
- Place an old towel or soft cloth on work surface. Remove Toilet from floor and place upright, with back facing you, on work surface.
- 5. Remove old Closet Flange Seal (may be found on Toilet or in floor at Closet Flange). Discard.
- 6. Cover Holding Tank opening to contain odor.


To Remove Vacuum Breaker

- 1. Cut old Tie Strap. Discard.
- Using pliers, squeeze and lower each of two Hose Glamps which attach Vacuum Breaker to tubes (Fig. A).
- 3. Rock old Vacuum Breaker back and forth to separate it from each tube. Discard.

To Install New vacuum Breaker

1. Push new Vacuum Breaker onto both hoses (Fig. A).

Vacuum Breaker

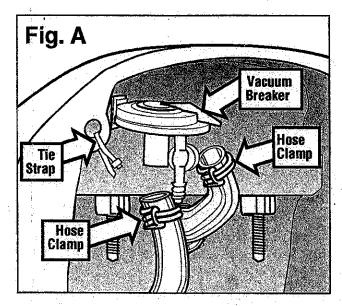

- 2. Using pliers, squeeze and raise each of two Hose Clamps to firmly attach Vacuum Breaker to tubes.
- 3. Secure new Vacuum Breaker to bowl with new Tie Strap.

To Reinstall Toilet To Floor

- 1. Install new Closet Flange Seal to Toilet Mounting Flange, lip side outward. Friction holds it in place.
- 2. Keeping Mechanism Blade open to assure holes line up, position Toilet over Closet Flange.
- 3. Reconnect Water Supply Line.
- 4. Bolt Toilet to floor with Lag Screws. Tighten.
- 5. Turn on RV's water supply. Flush test.
- 6. Install Bolt Caps.