




1217 E. 7th Street
 Mishawaka, IN 46544
 Phone: 1-800-334-4712
 1-888-339-2539
 Fax: 574-256-6743

T.I.P. Troubleshooting Information on Power Gear

RAMP INSTALLATION

1. Put the ramp into position. This is done by sliding the flange of the ramp over the floor for at least 1/8". In case of a 3-piece ramp first install the cornerparts, and then slide the centerpiece in between. Make sure that the three pieces are aligned.
2. Mount the screws through the corresponding holes in the ramp, to the floor.
3. Install the felt. The correct position of the felt is 1/4" from the edge. Do not use felt 1/4" from the corners of the ramp.

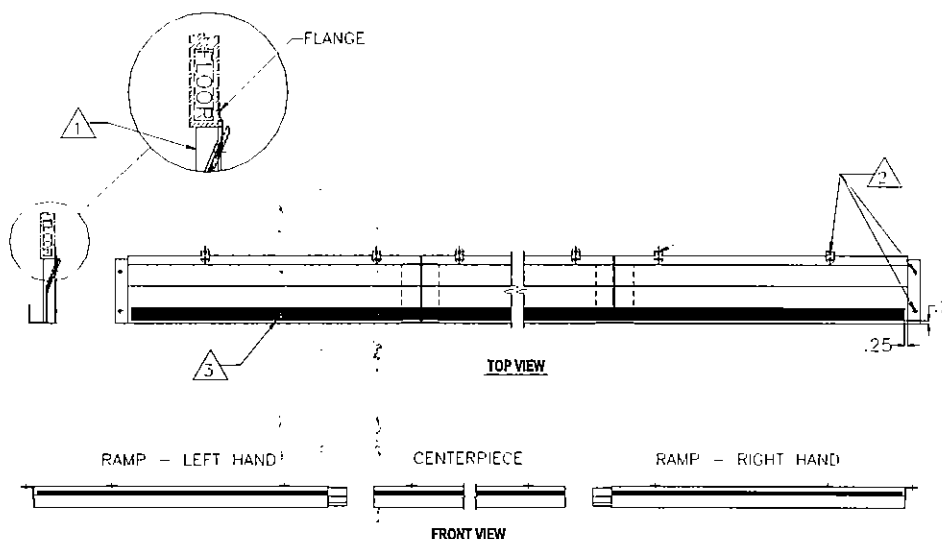

OPTIONAL CORNERSEALS:

Follow the next instructions if the ramp is equipped with optional cornerseals.

4. Screw both the cornerseals to the ramp as shown in the drawing.

