



RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204

Web: www.rvcomfort@airxcel.com
Support: www.rvsupport@airxcel.com
Sales: www.rvsales@airxcel.com

INSTALLATION AND OPERATING INSTRUCTIONS
FOR 6535A335*
2 STAGE HEAT PUMP WALL THERMOSTAT

* Last digit represents
specific model number




Note:
Actual thermostat is black with white markings.
Colors were reversed for use in these instructions.

ATTACHING THE WALL THERMOSTAT

1. Separate the thermostat body from the base by gently pulling at the top and bottom. See Figure 2.
2. Attach the new thermostat base to the wall at the desired mounting location.

Figure 2

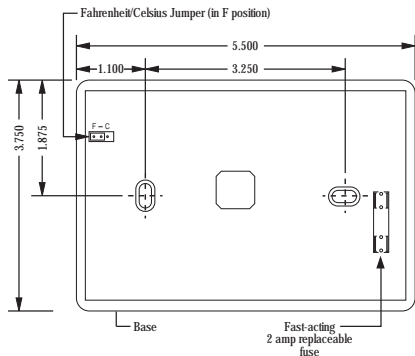

6535A335* Thermostat

OPERATION

The display indicates room temperature and the word ROOM is shown on the LCD until the temperature selector is pressed; at that time the display temporarily indicates the setpoint temperature and the word SET is shown on the LCD. Each time the UP arrow is pressed, the setpoint will increase. Each time the DOWN arrow is pressed, the setpoint will decrease. Once the temperature selector button is no longer pressed for a few seconds, the room temperature will again be displayed, and the word ROOM will be displayed on the LCD.

In electric heat mode, if the heat pump is unable to satisfy the thermostat, the heatpump goes into lockout. DIFF will display on the thermostat LCD indicating second stage heating is required to satisfy the thermostat.

In gas heat mode, the gas furnace will provide the only source of heat and the heat pump is locked out.

TEMPERATURE		
MODE	RANGE	
	F	C
Cooling (set)	98-33 F	37-1 C
Heating (set)	98-33 F	37-1 C
Display (room)	99-32 F	38-0 C

NOTE 1

The temperature is displayed in degrees Fahrenheit as a factory set default (see Figure 2 on Page 8). To display in degrees Celsius, move the jumper marked "F" and "C" to bridge between middle pin and position "C."

Refer to truth table (Pages 2 and 3) for a more detailed listing of operation sequence.

THERMOSTAT LOCATION

This thermostat is a sensitive instrument. For accurate temperature control and comfort, the following considerations should be taken into account:

1. Locate the thermostat on an inside wall about five feet above the floor. Pick a dry area where air circulation is good.
2. Do not install the thermostat where there are unusual heating conditions such as direct sunlight, heat producing appliances (television, radio, wall lamp, etc.), or a furnace or air conditioner supply register.

	Mode Switch	Fan Switch #1	Fan Switch #2	Calling	Operation
10	Cool	On	Hi	No	ID fan high continuous
11	Cool	On	Hi	Stage 1 1 Above Set	ID fan high continuous, compressor #1 and OD blower low cycle as needed
12	Cool	On	Hi	Stage 2 2 Above Set	ID fan high continuous, compressors #1 and #2 and OD blower high cycle as needed
13	Off	Auto	Lo or Hi	N/A	No functions occur in this mode
14	Off	On	Lo	N/A	ID fan low continuous
15	Off	On	Hi	N/A	ID fan high continuous
16	Gas Heat	Auto or On	Lo or Hi	No	No functions occur in this mode
17	Gas Heat	Auto or On	Lo or Hi	Stage 1	Heater will be energized to run
18	Gas Heat	Auto or On	Lo or Hi	Stage 2	There is no provision for second stage heat when operating in the gas heat mode
19	Elec Heat	Auto or On	Lo or Hi	No	No functions occur in this mode
20	Elec Heat	Auto or On	Lo or Hi	Stage 1	Heat pump will run ID fan high, Compressor #1 and #2 with reversing valve #1 and #2 and OD fan high
21	Elec Heat	Auto or On	Lo or Hi	Stage 2 *See Note 2* (Page 4)	Heat pump will run ID fan high, Compressor #1 and #2 with reversing valve #1 and #2, OD fan high and heater will be energized to run

OPERATION CHART

The chart below shows the system functions with the 6535A335* thermostat. After the entire air conditioning system (and furnace system) is installed, check each position function.


6535A335* 2-STAGE HEAT PUMP THERMOSTAT TRUTH TABLE

	Mode Switch	Fan Switch #1	Fan Switch #2	Calling	Operation
1	Cool	Auto	Lo	No	No functions occur in this mode
2	Cool	Auto	Lo	Stage 1 1 Above Set	ID fan low, compressor #1 and OD blower low cycle as needed
3	Cool	Auto	Lo	Stage 2 2 Above Set	ID fan low, compressor #1 and #2 and OD blower high cycle as needed
4	Cool	On	Lo	No	ID fan low continuous
5	Cool	On	Lo	Stage 1 1 Above Set	ID fan low continuous, compressor #1 and OD blower low cycle as needed
6	Cool	On	Lo	Stage 2 2 Above Set	ID fan low continuous, compressor #1 and #2 and OD blower high cycle as needed
7	Cool	Auto	Hi	No	No functions occur in this mode
8	Cool	Auto	Hi	Stage 1 1 Above Set	ID fan high, compressor #1 and OD blower low cycle as needed
9	Cool	Auto	Hi	Stage 2 2 Above Set	ID fan high, compressors #1 and #2 and OD blower high cycle as needed

WIRING THE WALL THERMOSTAT

OEM must supply mating parts to connect these thermostats per Figure 1. The plugs must be connected to motorcoach wire harness before the base is secured to the wall.

Figure 1 6535A335* Thermostat Assembly with Plugs

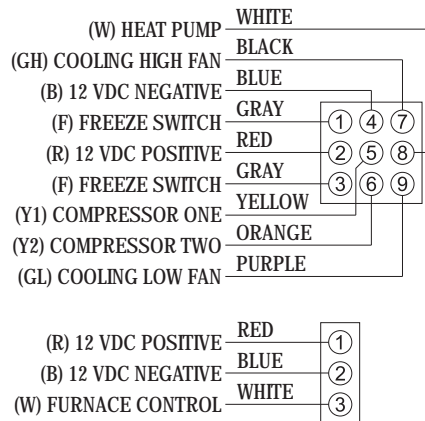

NOTE 2

Heat pump algorithm to bring on gas furnace as second stage heat

Setpoint	Indoor Temp.	Operation
70	70+	No functions occur
	69	Heat pump turns on (primary heat source)
	71	Heat pump turns off (thermostat satisfied)
	69	Heat pump turns on
	65	Gas furnace turns on (heat pump not able to satisfy thermostat) (First strike for second stage heat counter)
	71	Heat pump and gas furnace turn off (thermostat satisfied)
	69	Heat pump turns on
	65	Gas furnace turns on (heat pump not able to satisfy thermostat) (second strike for second stage heat counter)
	71	Heat pump and gas furnace turn off (thermostat satisfied)
	69	Heat pump turns on
	65	Gas furnace turns on (heat pump is again unable to satisfy thermostat), (second stage heat counter reaches third strike and heat pump is locked out for 1 hour and 45 minutes), second stage heat counter is reset if heat pump is running for more than 20 minutes and does not call for second stage heat
	71	Gas furnace turns off (thermostat satisfied)
	69	Gas furnace turns on (becomes primary heat source)
	71	Gas furnace turns off (thermostat satisfied) After 1 hour and 45 minutes lockout
	69	Heat pump turns on (resumes as primary heat source)
	65	Gas furnace turns on (becomes primary heat source) (heat pump is locked out for another 1 hour and 45 minutes)
	71	Gas furnace turns off (thermostat satisfied) After 1 hour and 45 minutes lockout
	69	Heat pump turns on (resumes as primary heat source)
	71	Heat pump turns off (thermostat satisfied) (second stage heat counter is reset any time heat pump satisfies thermostat setpoint and does not need gas furnace)

The word "DIFF" will display on LCD when second stage heat is operating and the heat pump is locked out. There is a 30-second delay between Stage 1 and Stage 2. There is also a 3-minute anti-short cycle delay time for cooling.

APPLICATION

The 6535A335* thermostat is intended for use with an RV Products 2 stage heat pump. The thermostat connects to the heat pump with a 9-pin plug through a lifeline. The OEM (Original Equipment Manufacturer) must supply the 12 VDC wiring and the furnace control wiring that connects to the 3-pin plug on the thermostat. The OEM supplies the mating receptacle for the 3-pin plug. RV Products suggests the thermostat wiring be a minimum of 18 gauge. The furnace control circuit must not exceed 1 amp. The thermostat is equipped with a replaceable fast-acting 2 amp fuse located on the base of the thermostat. The fuse is designed to "open" if the furnace is mis-wired or if there is a short in the system. Before replacing the fuse, the cause of the failure must be located and corrected.

INSTALLATION INSTRUCTIONS

BE SURE ALL ELECTRICAL POWER HAS BEEN DISCONNECTED FROM THE HEAT PUMP AND THE POWER SUPPLY.

These instructions are provided for the proper mounting of the thermostat itself. An Operation Chart (Pages 2 and 3) is provided to show the thermostat capabilities.